


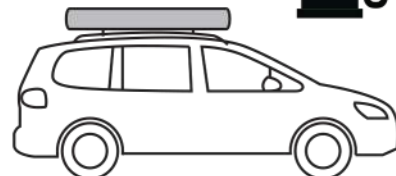
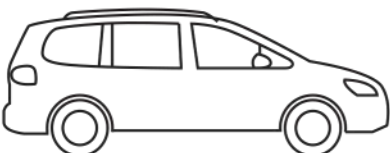
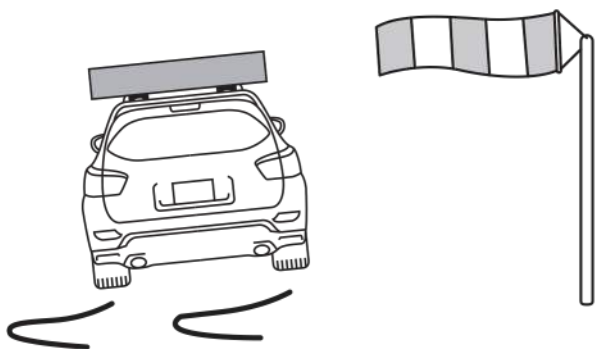
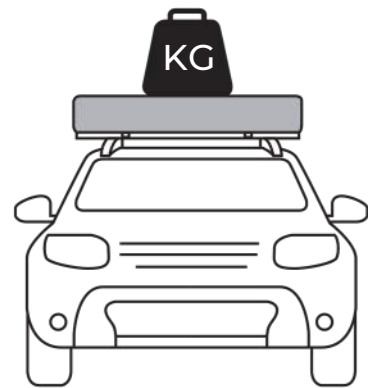
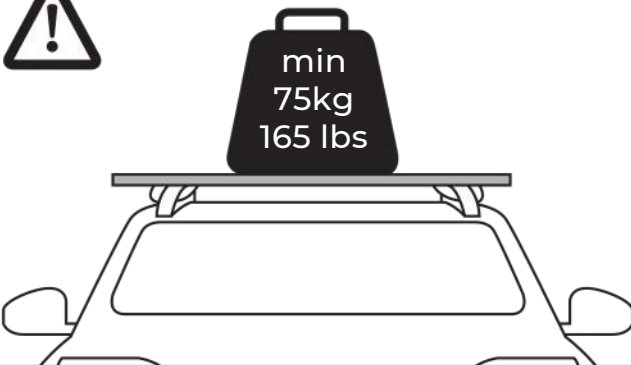


ROVINGPOD RIDGE MANUAL

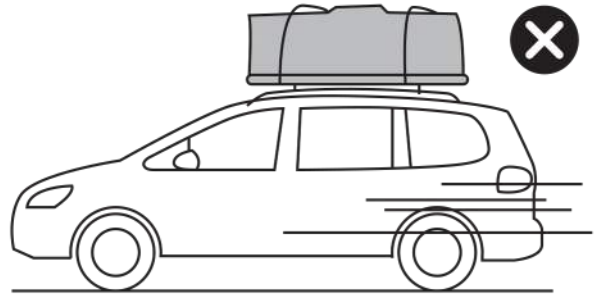

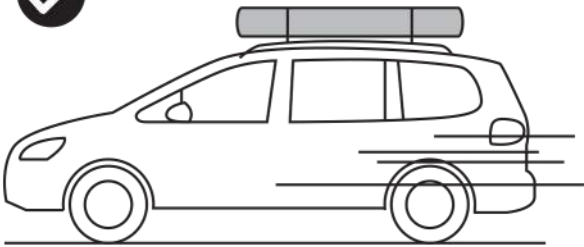

A x2

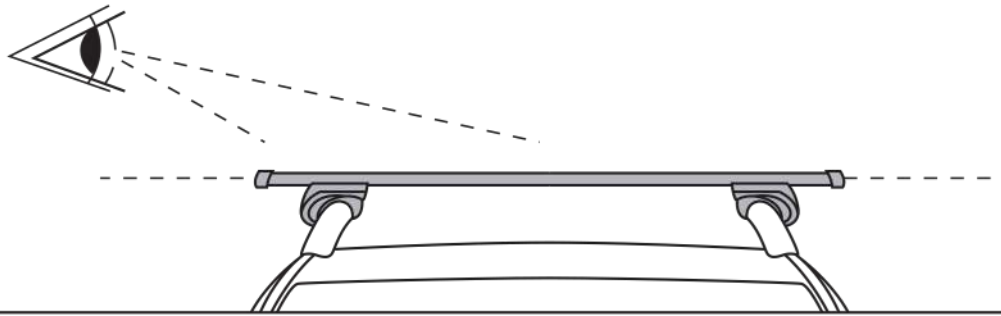

B x2




C x4



D x6



E x8

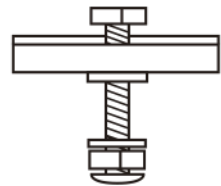

F x2




G x1




H x4




I x1

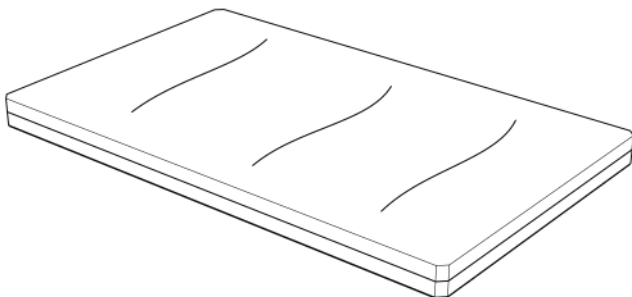



L x1

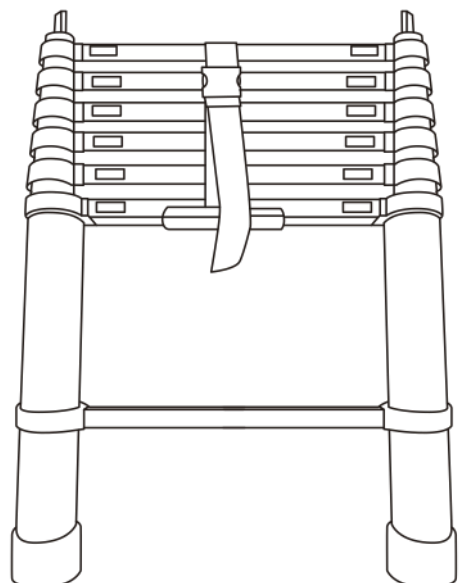


① Fix 2x mounting tracks to base


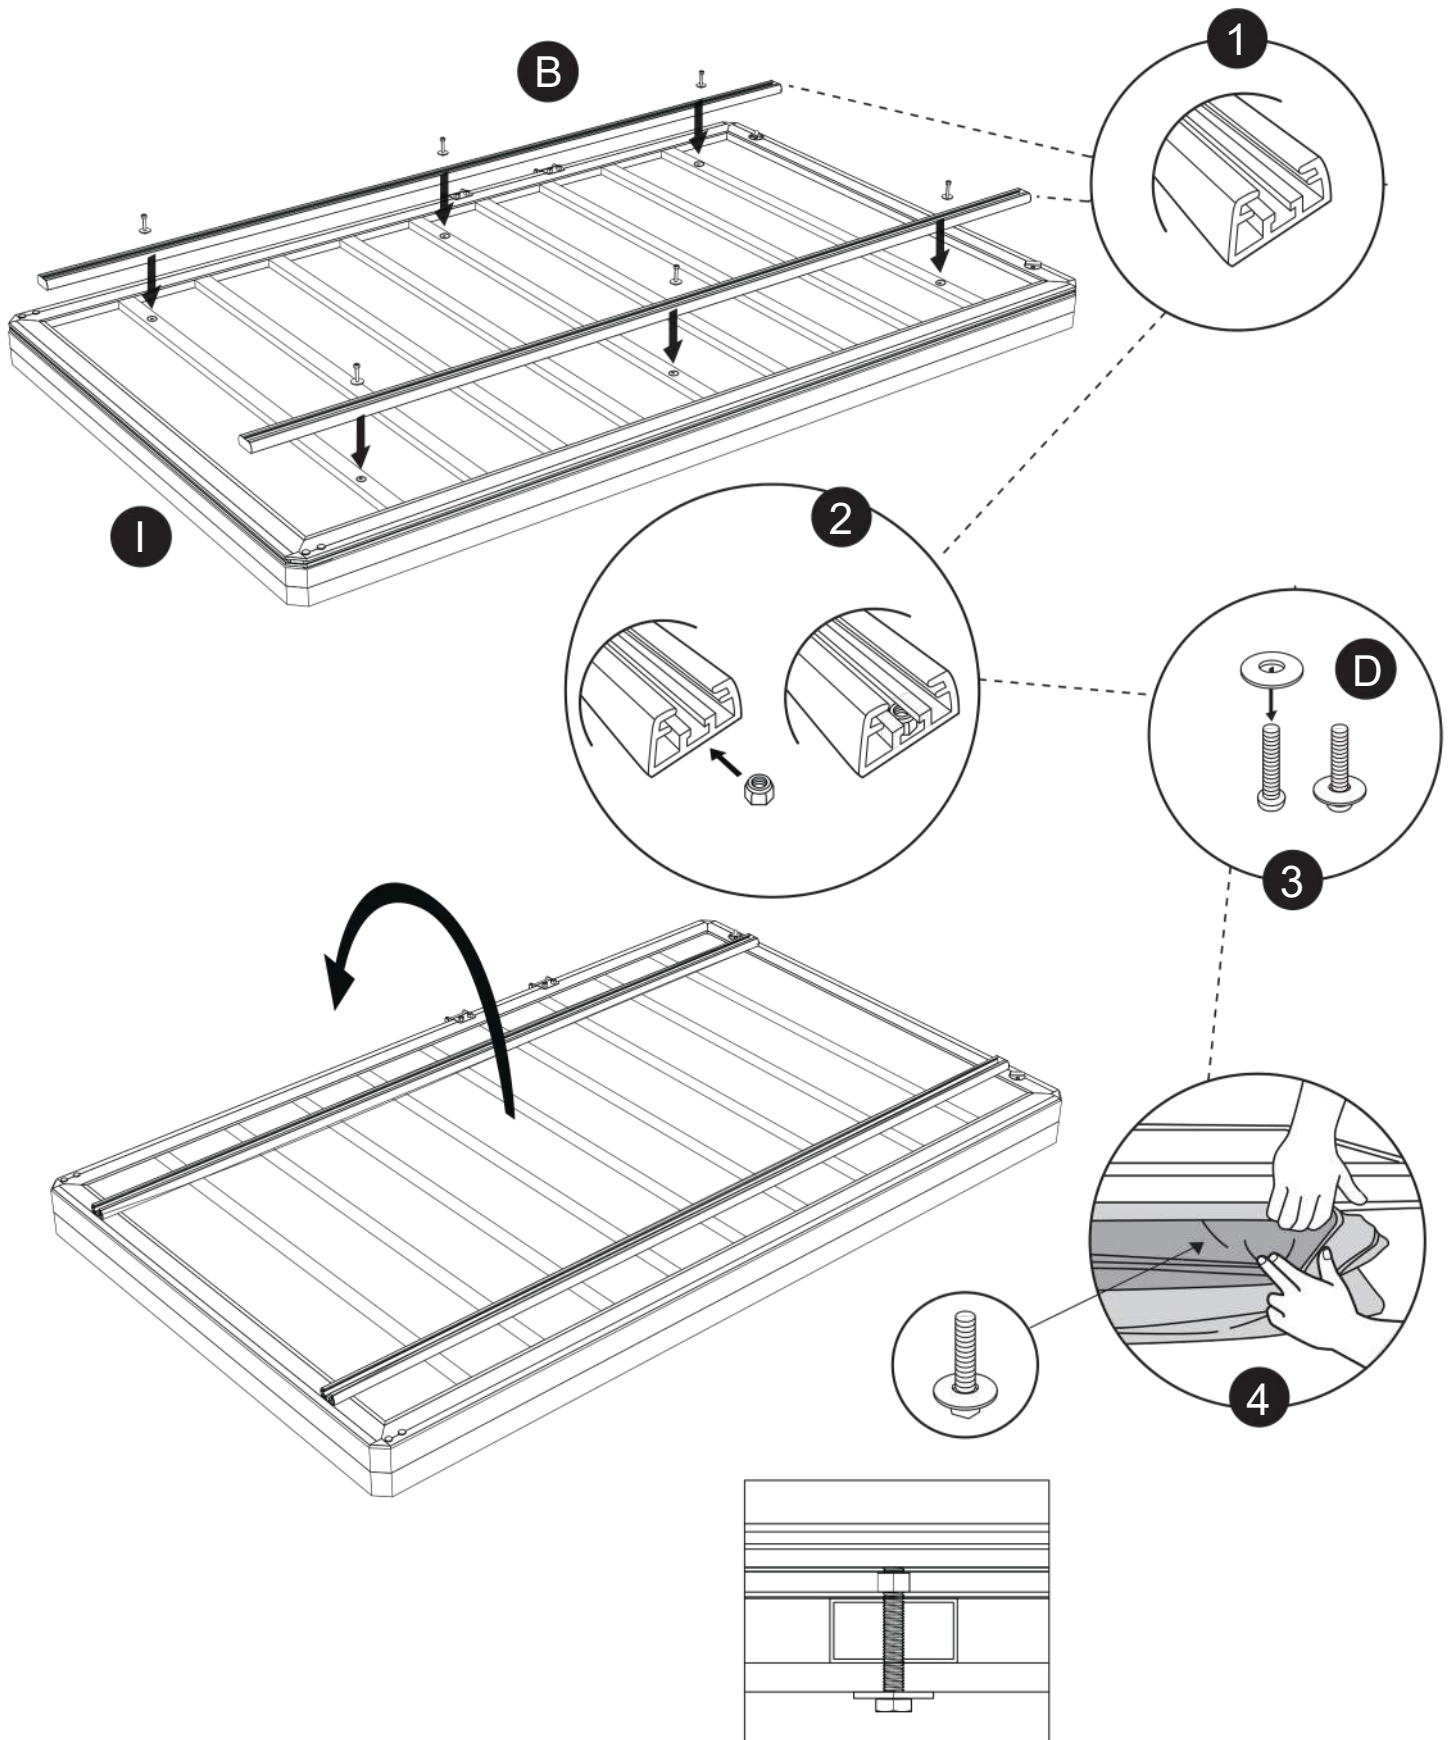


- ② Put the tent to car roof and install the tent to roof rack

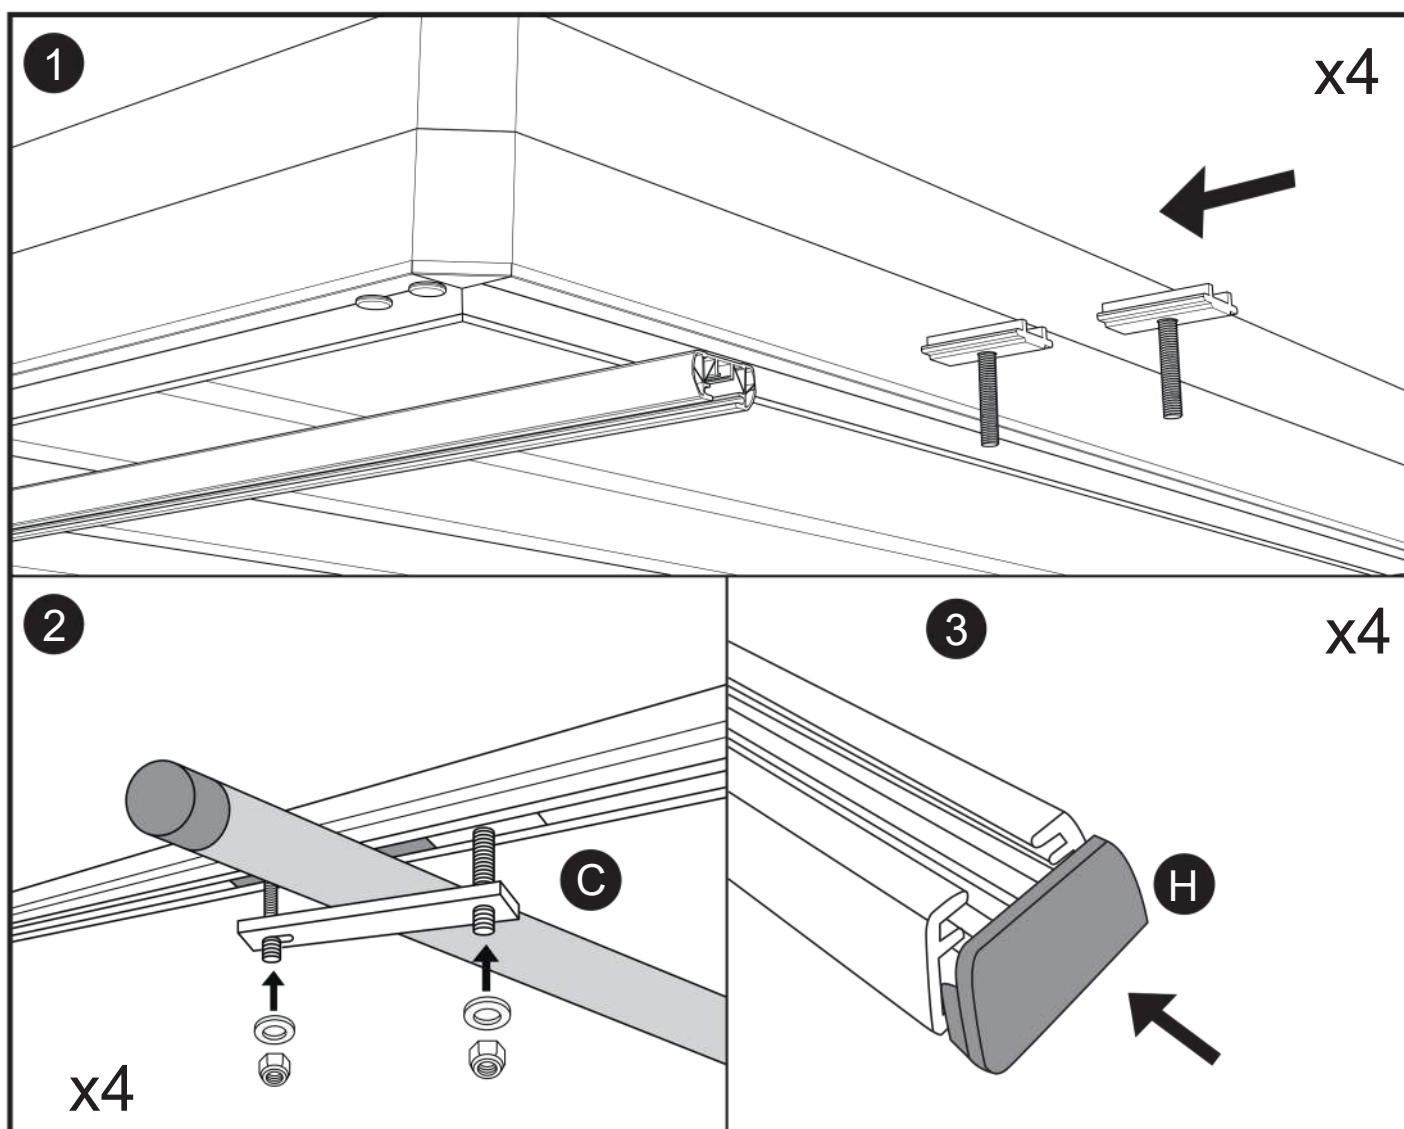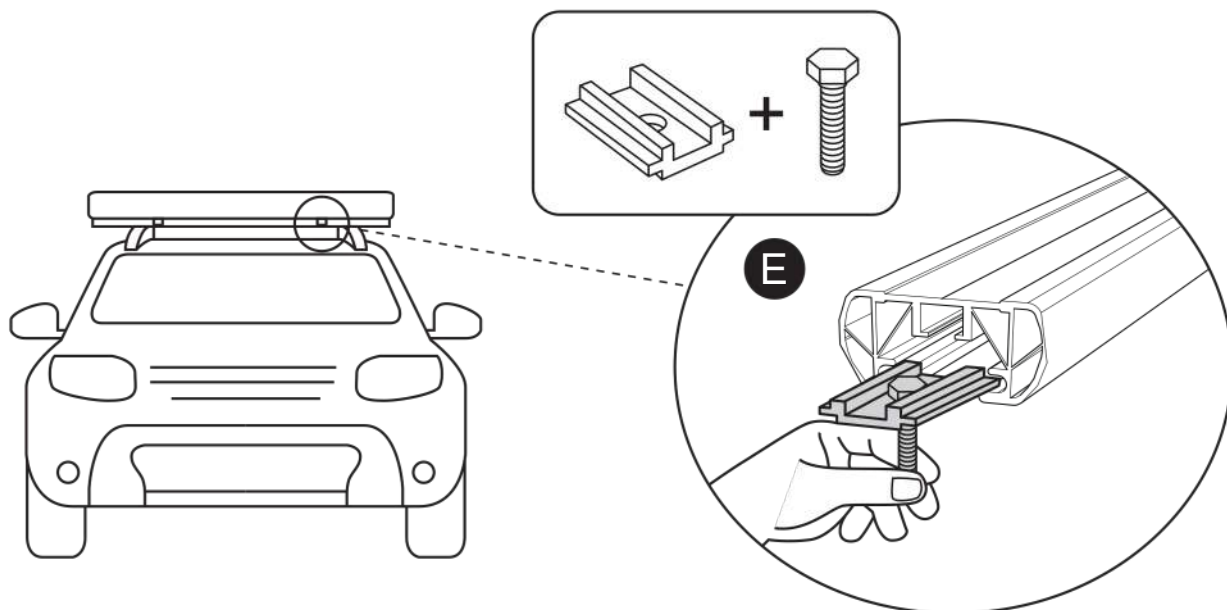


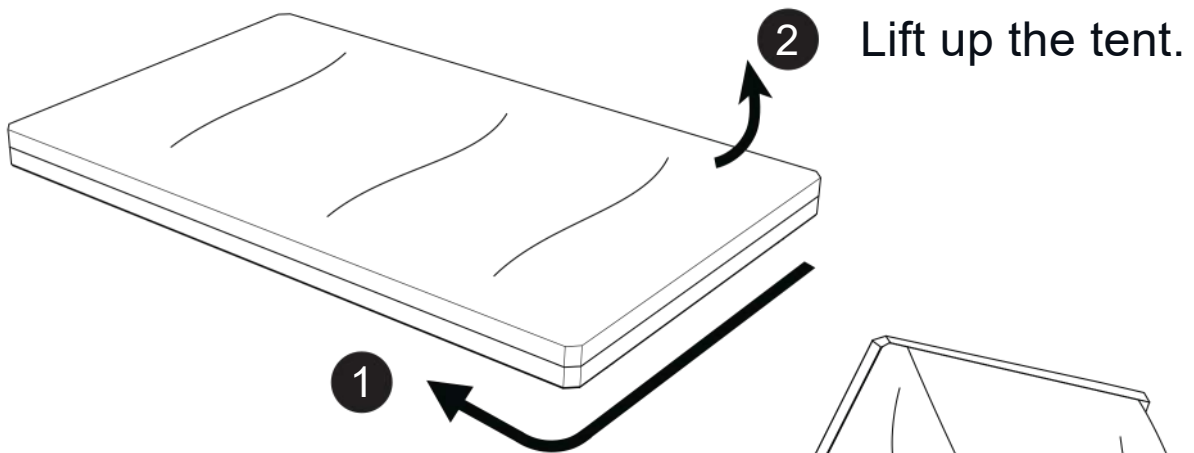


Open the cover by zipper

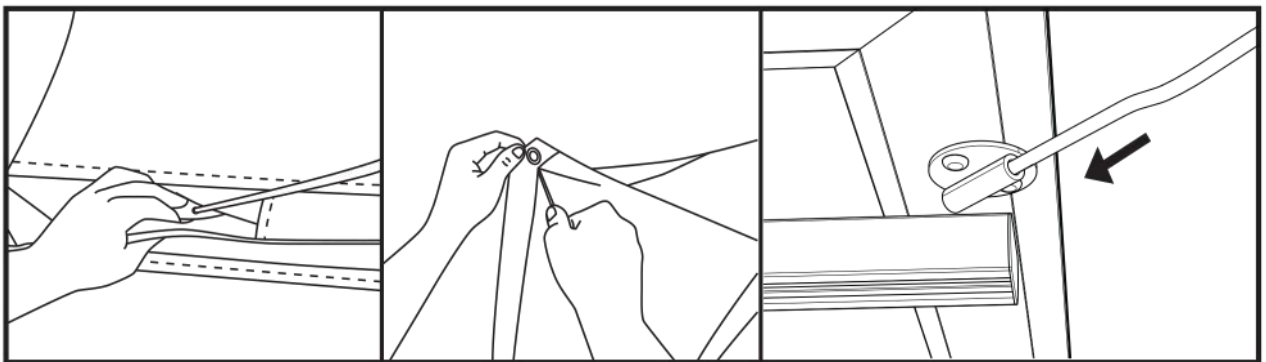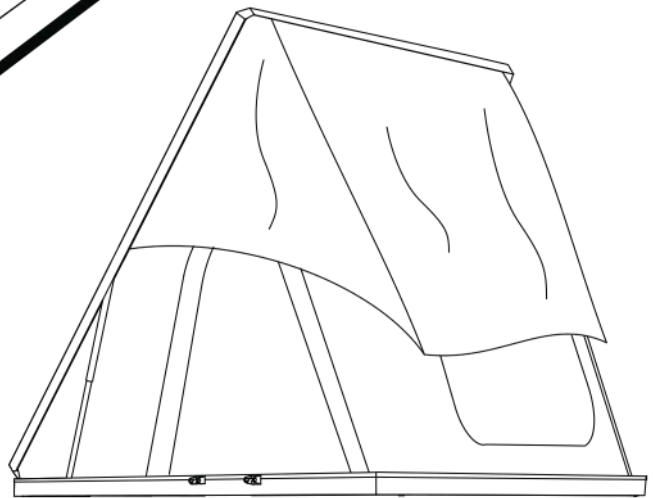


Take out two spring wire hooks and support the rain fly as shown in the figure.

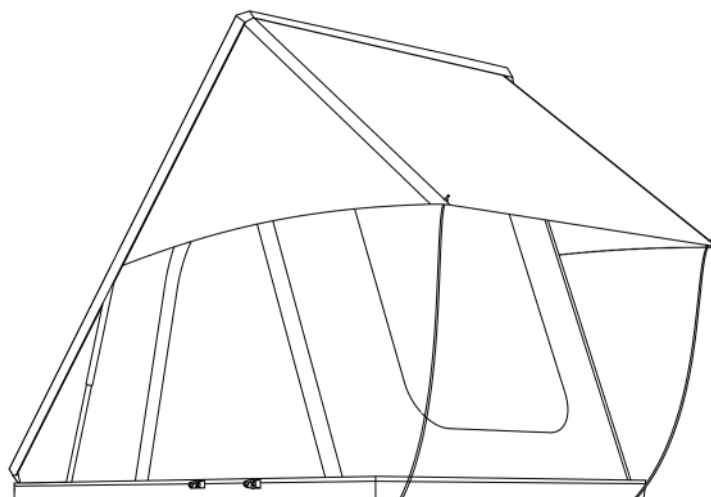

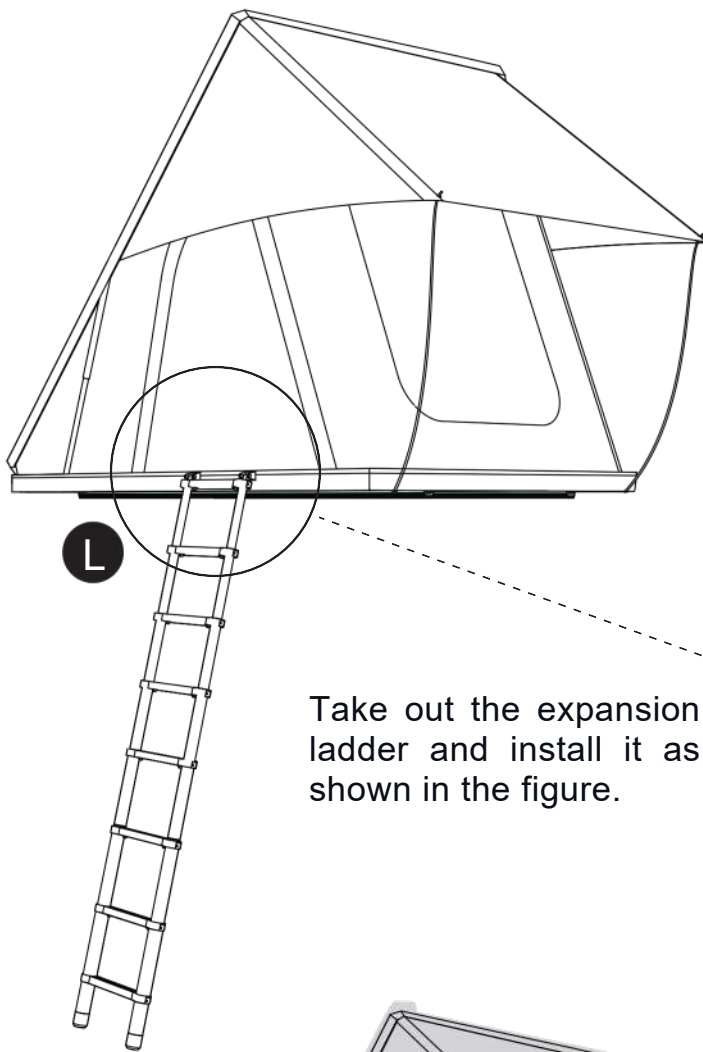

Take out the expansion ladder and install it as shown in the figure.

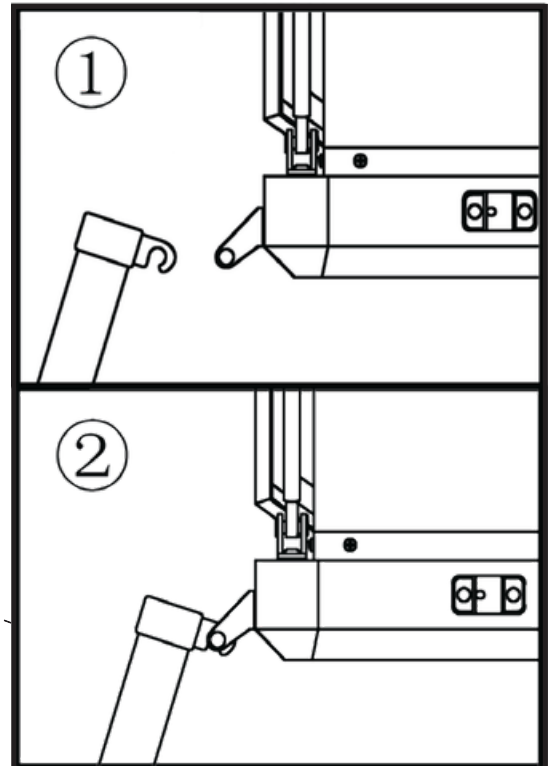

IMPORTANT

When closing the tent do not leave fabric out. Please ensure a whole zipper in cover closed before starting

